

INSTALLATION GUIDE KERNOWJET WALLSHARK


WallShark is an ultra-tough polyester film with zero stretch, enabling very accurate panel joints. Your wallcovering will look just like a traditional one but with the benefit of the ease of application of a self-adhesive film and without its downsides.

The wall must be smooth, clean, dry and free of grease, silicone coatings and any other residue, dust and debris. Application temperature of the surface should be 50° to 100°F (10° to 38°C).

How to apply a multi-panel design

Application is a combination of self-adhesive and traditional wallcovering application techniques:

1. Panels should always be applied vertically:

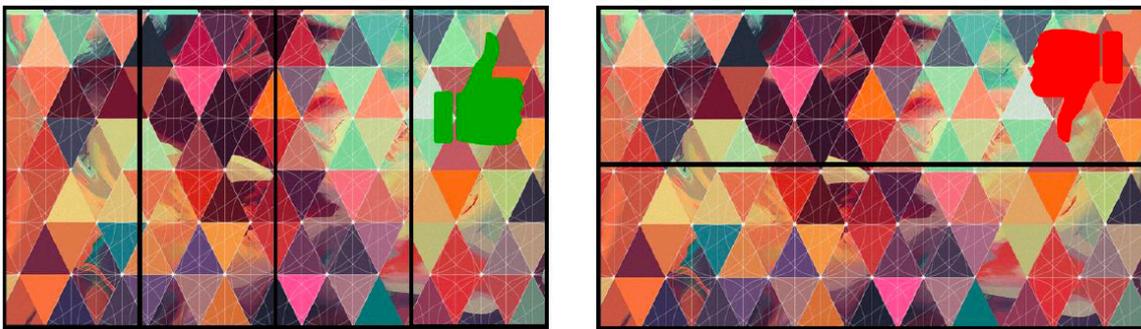

2. a If you have a very precise wallpaper cutting machine (Fotoba or equivalent), you can cut the panels to the exact width and apply directly with butt-joints.

2. b If you wish to cut the panels manually, we recommend the double cut install method:

The print needs an additional bleed into the side of each panel in order to overlap one panel onto the next and perfectly match the graphics on the wall. Typically, the overlapped area will be between 1" and 2".

Use a very sharp blade to cut through both pieces of the overlapped WallShark.

After cutting a straight line down the wall, peel back the top layer and remove the trimmed portion, which will result in exact match of the panels. When done correctly, the seams on the wall should be nearly invisible from a normal viewing distance. On drywall, we recommend using a seam cutting tool. The tool will allow you to set a metal plate behind the layers of wallcovering that are being cut, shielding the wall from a contact with the knife.



The information provided herein is correct to the best of our knowledge. No liability for any errors, facts or opinions is accepted. We recommend users make their own assessments to satisfy themselves as to the suitability of this product for their application.

Copyright Sensitisers Group 2025